





MUD SET BEADS

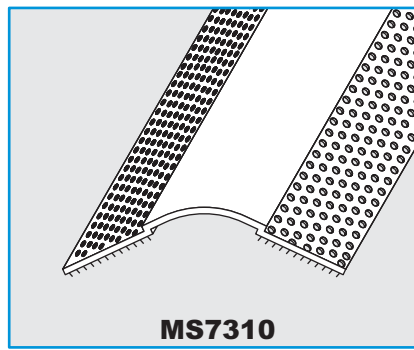


MS7310
Adjustable from 125° - 145°

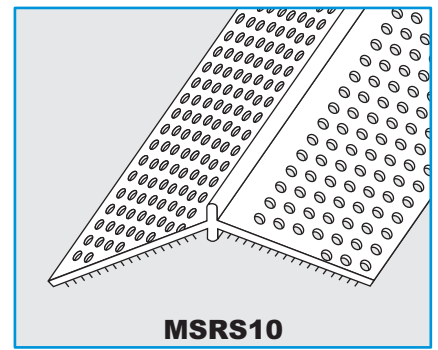


MSRS10
Adjustable from 115° - 155°

Mud Set Adjustable Splayed Bullnose & Mud Set Adjustable Splayed Corner Bead

Mud Set Beads are designed to be installed with All Purpose Joint Compound. Do not thin out the mud/compound and do not install with spray adhesives, staples, nails or screws.

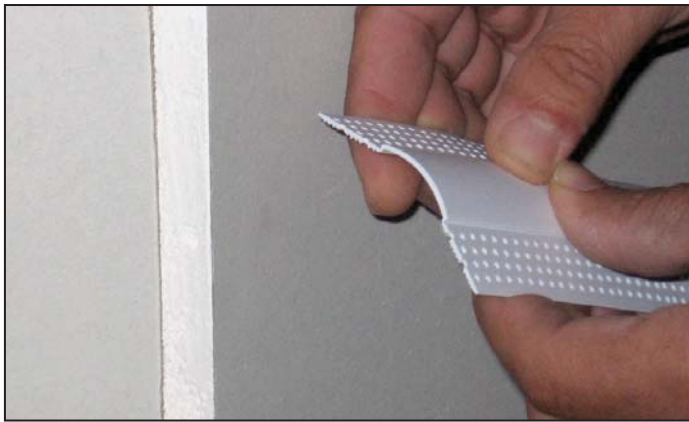

Before installing, determine your offset angle and either close or open the bead by squeezing the corner with your hands as shown above.

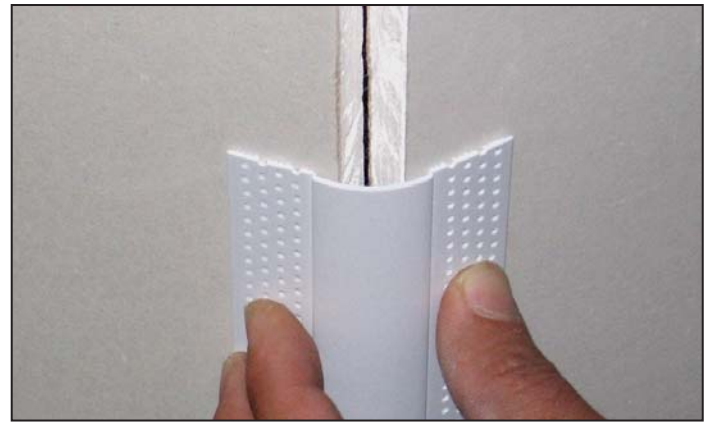

Once you have formed the adjustable corner bead to your desired angle, dry fit and adjust accordingly.



METHOD 1

Run your bead through a hopper to coat the under side of the bead with mud/compound. Place your bead on the corner and press down with mud knife or rolling tool. Wipe off excess mud and finish mudding. The first coat of mud can be applied immediately.



Place bead onto drywall corner once mud is troweled or boxed on



Use roller tool or mud knife to press into place

METHOD 2


Trowel or box on a layer of mud/compound onto drywall corner. Place your corner bead onto the mudded corner. You can then use your mud knife or rolling tool to press on the bead. Wipe off excess mud and finish mudding. The first coat of mud can be applied immediately.

TIP To boost the performance and strength of any drywall compound, use Trim-Tex's high performance MUD-MAX drywall compound additive.






MUD SET BEADS

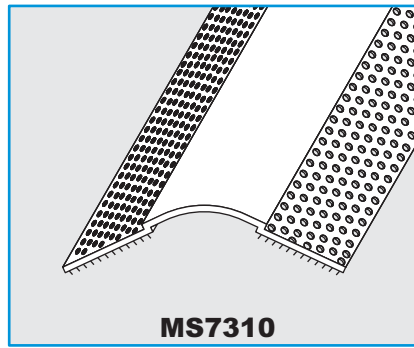


Ajustable Desde 125° - 145°

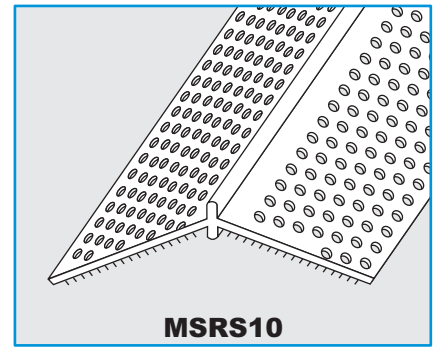


Ajustable Desde 115° - 155°

Esquinero Mud Set Bullnose Abierto Adjustable & Esquinero Mud Set Rígido Abierto Adjustable

Los Esquineros Mud Set son diseñados para ser instalados con el compuesto All Purpose Joint Compound. No diluya el compuesto y no instale con pegamento en aerosol, grapas, clavos o tornillos.

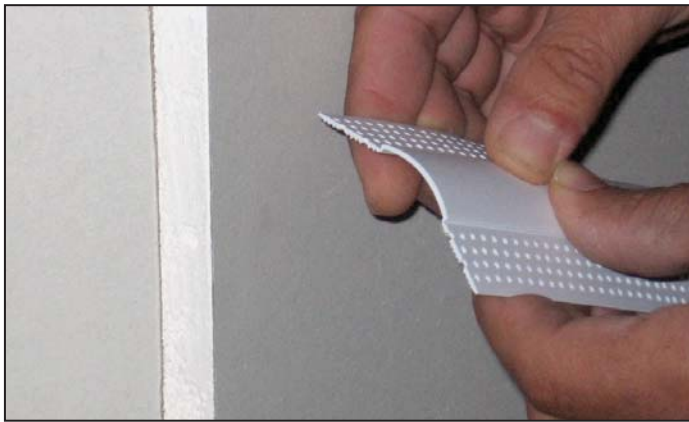

Antes de instalar, determine el ángulo adecuado y cierre el esquinero apretando la esquina con su mano como se indica arriba.

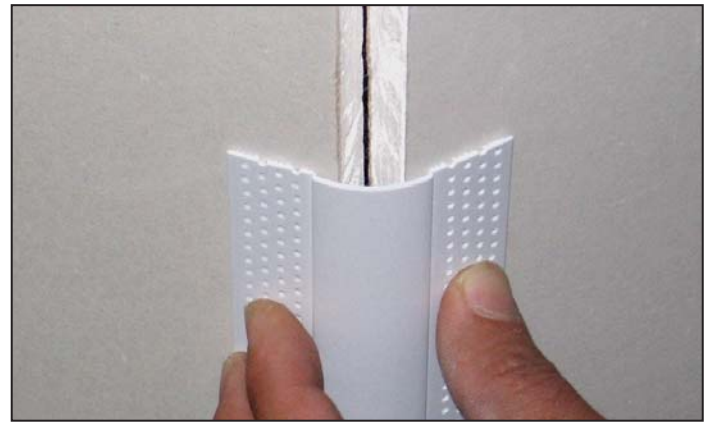

Ya que haga formado el esquinero al ángulo deseado, póngalo y ajústelo como corresponde.



Instale esquinero después de haberle agregado el compuesto



Use herramienta de rodillo o espátula para presionar

Método 1.

Corra su esquinero por el hopper para cubrir la parte trasera con compuesto de tabla roca. Instale el esquinero y presione con su espátula o su herramienta de rodillo. Remueva el exceso de compuesto. La primera capa de compuesto puede ser aplicada inmediatamente.

Método 2.

Aplique una capa gruesa de compuesto de tabla roca en la esquina de la tabla roca. Instale su esquinero. Puede usar su espátula o la herramienta de rodillo para presionar al esquinero. Remueva el exceso de compuesto. La primera capa de compuesto puede ser aplicada inmediatamente.

Consejo

Para aumentar el rendimiento y la resistencia del compuesto de tabla roca, use MUD-MAX de Trim-Tex, el aditivo de compuesto de tabla roca de alto rendimiento.

