


DECORATIVE L BEAD INSTALLATION INSTRUCTION

HOW TO INSTALL

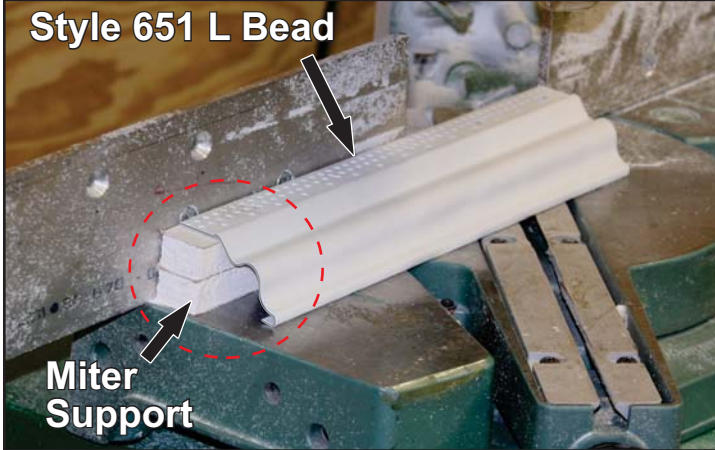


1. Begin by roughly snipping your bead 6" longer than your desired length. Before cutting your inside or outside corners with a miter saw, be sure to use a support under the mud leg for accurate miter cuts. For a double $\frac{5}{8}$ " bead, you can use two $\frac{5}{8}$ " pieces of drywall for your miter support. Next, dry fit your mitered corners and adjust as necessary.
2. When installing your bead be sure to use **Trim-Tex 700/710 Adhesive Caulk** on the return leg as shown above, and **Trim-Tex 847 Spray Adhesive** on the mud leg. Staple the mud leg every 6" with $\frac{1}{2}$ " divergent staples. The 847 can also has installation instructions that you can refer to. Don't forget to caulk your miters and butt joints and then clean any excess caulk before finishing.
3. Finish the installation by mudding, sanding, and painting the bead as you normally would any corner bead. To boost the performance and strength of your drywall compound, use Trim-Tex's high performance MUD-MAX drywall compound additive (stock # 850 for Gallon & 851 for 16 oz Bottle).

(Spanish)

INSTRUCCIONES PARA LA INSTALACION

1. Comience por cortar el esquinero 6" mas de la medida deseada. Antes de hacer los cortes, soporte la pieza para obtener uniones mas presizas. Para el esquinero decorativo doble $\frac{5}{8}$ ", puedes utilizar dos tiras de $\frac{5}{8}$ " de tablaroca para soporte. Pruebe las piezas y ajuste si es necesario.
2. Cuando instale sus esquinas, asegurese usar el pegamento 700/710 de Trim-Tex en la extremidad no perforada y el pegamento 847 de Trim-Tex en la extremidad perforada. Engrape la extremidad perforada cada 6" con grapas de $\frac{1}{2}$ " x $\frac{1}{2}$ ". Tambien se puede referir a las instrucciones del pegamento 847. No olvide agregar el pegamento 710 a las uniones y limpiar el exceso antes de acabar.
3. Termine la instalacion con el material para tablaroca y pinte de igual manera que se recomienda a cualquier otra esquina en paredes interiores. Para una mejor adiccion del material para tablaroca a la esquina decorativa, utilice el aditivo Mud-Max de Trim-Tex (#850/galon y #851/botella de 16 oz.)

For Ultimate Adhesion use Trim-Tex #700/710 Adhesive Caulk!

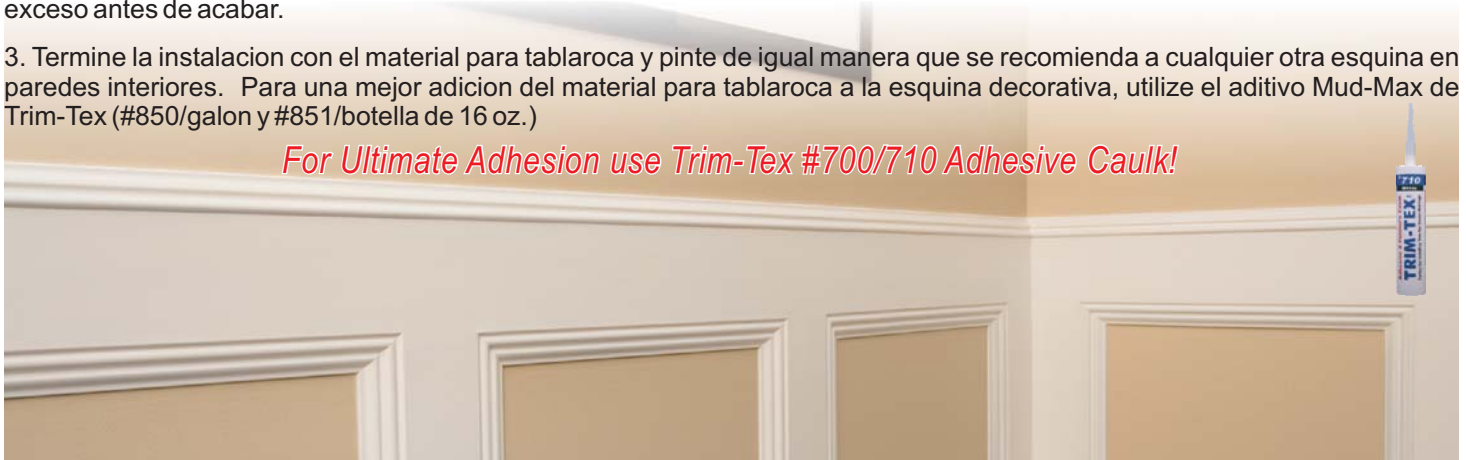

Contact us today! Phone: 800-874-2333 / Fax: 800-644-0216 / www.trim-tex.com

© Copyright 2007 Trim-Tex Inc. All Rights Reserved