


MUD SET BEADS

Mud Set 3/4" R. Bullnose Corner Bead

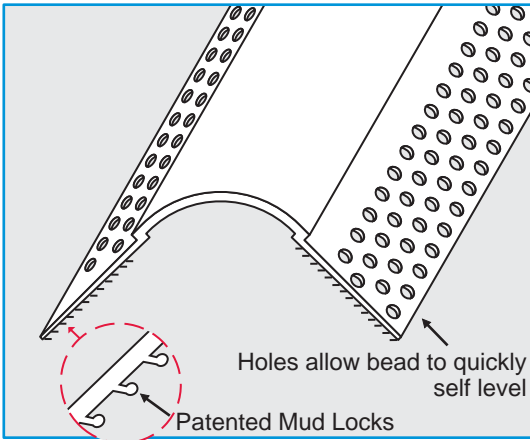

- **SUPERIOR CORNER BEAD AT A LOWER COST, FEATURING PATENTED MUD LOCK TECHNOLOGY WITH 350% MORE BONDING SURFACE.**
- **WILL NOT *DENT* OR *BLISTER* AND ABSORBS *EXTREME IMPACT***
- **ENGINEERED HOLE PATTERN ALLOWS EXCESS MUD TO FLOW THROUGH & QUICKLY SELF LEVEL THE BEAD, SAVING TIME & MATERIALS**
- **RUST PROOF RIGID VINYL BEAD, DOES NOT PROMOTE MOLD GROWTH**
- **MUD LOCK TECHNOLOGY ASSURES NO CRACKS OR CALL BACKS**
- **COMPATIBLE WITH MOST HOPPERS AND ROLLER TOOLS**

INSTALLATION

Mud Set Beads are designed to be installed with All Purpose Joint Compound. Do not install with spray adhesives, staples, nails or screws.



METHOD 1

Run your bead through a hopper to coat the under side of the bead with mud/compound. Place your bead on the corner and press down with mud knife or rolling tool. Wipe off excess mud and finish mudding. The first coat of mud can be applied immediately.

METHOD 2

Trowel or box on a layer of mud/compound onto drywall corner. Place your corner bead onto the mudded corner. You can then use your mud knife or rolling tool to press on the bead. Wipe off excess mud and finish mudding. The first coat of mud can be applied immediately.



TIP To boost the performance and strength of any drywall compound, use Trim-Tex's high performance MUD-MAX drywall compound additive.

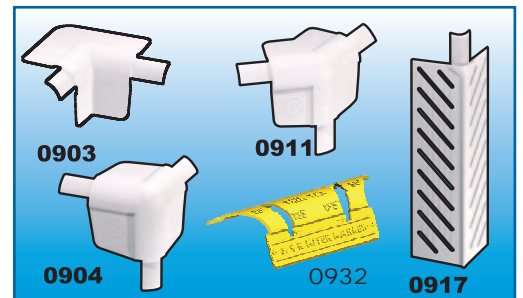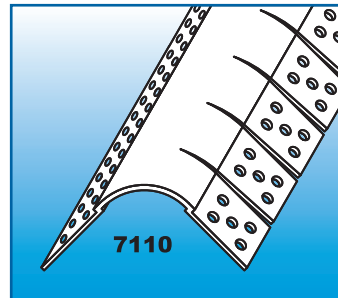

STOCK #	LENGTH	PCS/ BOX
MS7008	8'	40
MS7009	9'	40
MS7010	10'	40
MS7012	12'	40

New MS7010 Corner Bead perfectly matches all 3/4" Bullnose Archways, Accessories & Tools

Esquinero Bullnose 3/4" Mud Set

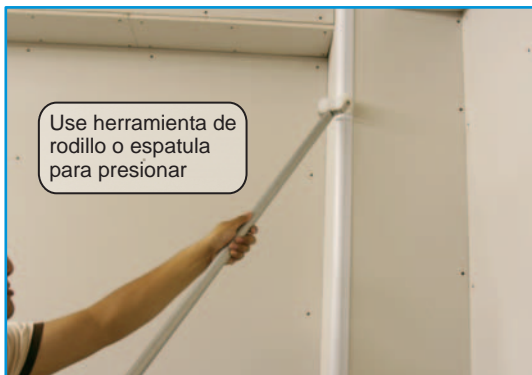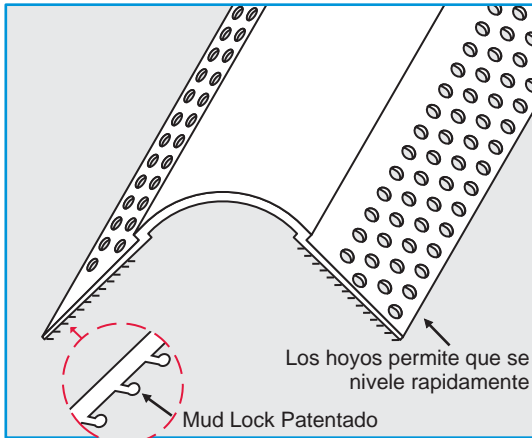

- **ESQUINERO SUPERIOR A UN MEJOR PRECIO, INCORPORANDO LA TECNOLOGIA PATENTADA DE MUD LOCK CON 350% MAS COBERTURA**
- **NO SE DAÑA NO SE AMPOLLA Y ABSORBE GOLPES FUERTES**
- **EL ESTAMPADO DE HOYOS PERMITE QUE EL EXCESO DE COMPUESTO SALGA Y EL ESQUINERO SE NIVELA, AHORRANDO TIEMPO Y MATERIALES**
- **ESQUINERO DE VINILO ANTICORROSIVO, NO PROMUEVE MOHO**
- **TECNOLOGÍA DE MUD LOCK ASEGURA NO GRIETAS NI REPARACIONES COSTOSAS**
- **COMPATIBLE CON TODOS LOS HOPPERS Y HERRAMIENTAS PARA INSTALAR EL ESQUINERO**

Instalación


Los esquineros Mud Set fueron diseñados para ser instalados con compuesto de tabla roca de alta calidad. No instalar con adhesivos en aerosol, grapas, clavos o tornillos.

Método 1. Corra su esquinero por el hopper para cubrir la parte trasera con compuesto de tabla roca. Instale el esquinero y presione con su espátula o su herramienta de rodillo. Remueva el exceso de compuesto. La primera capa de compuesto puede ser aplicada inmediatamente.

Método 2. Aplique una capa gruesa de compuesto de tabla roca en la esquina de la tabla roca. Instale su esquinero. Puede usar su espátula o la herramienta de rodillo para presionar al esquinero. Remueva el exceso de compuesto. La primera capa de compuesto puede ser aplicada inmediatamente.

Consejo

Para aumentar el rendimiento y la resistencia del compuesto de tabla roca, use MUD-MAX de Trim-Tex, el aditivo decompuesto de tabla roca de alto rendimiento.

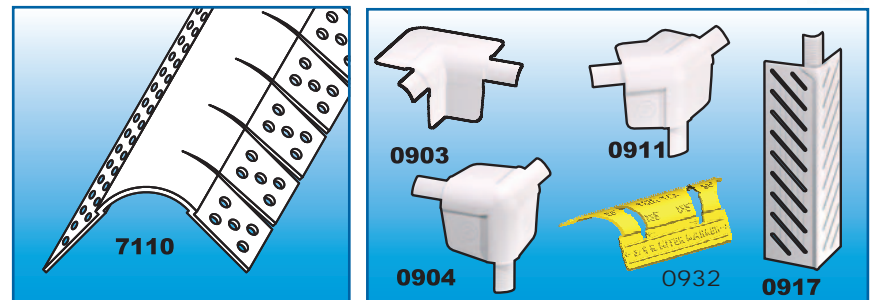

New El esquinero MS7010 combina perfectamente con el arco de bullnose 3/4", asesorios y herramientas.

STOCK #	LENGTH	PCS/ BOX
MS7008	8'	40
MS7009	9'	40
MS7010	10'	40
MS7012	12'	40