

# TRIM-TEX DRYWALL PRODUCTS

# SUBMITTAL SHEET

## Product: Mud Set Flat Tear Away

**Description:** Trim-Tex Mud Set Flat Tear Away are designed for areas where the drywall has been butted too close to slip the return leg behind the wall.

**Advantages:** Features extra long tear off strip. Creates a finished edge where drywall terminates at other substrates or building components such as windows and doors. Made from rust proof, dent resistant PVC to reduce jobsite and handling damage.

**Limitations:** Product is designed for interior use and is to be installed with high quality drywall mud/compound. Do not install with spray adhesives, staples, nails or screws. Do not thin out your mud like you would for paper faced beads. Trim-Tex's micro perforation hole design allows thick mud to spread out evenly. Mix your mud first and test before adding water.

**Applicable Standards:** Rigid PVC products made by Trim-Tex meet ASTM specifications D3678-97, D1784-03, C1047-99 and achieve a Class A rating for flame spread and smoke developed when tested under ASTM E84-10.


**Surface Characteristics:** Trim-Tex products are made from PVC. PVC does not support combustion and is self extinguishing when the source of flame or heat is removed.

**Installation:** Cut and dry fit the bead to verify proper length.

**Do NOT install with spray adhesives, staples, nails or screws.** Apply mud/compound to bead or corner depending on installation method. Mud Set Beads are designed to be installed with high quality drywall compounds. Install your bead with a compound tube or blade/trowel. If using a compound tube, use Trim-Tex Mud Head #452 designed specifically for the Mud Set Tear Away Bead. Place your bead into place. Once in position, use the handle of your taping knife to pressure the mud legs to the drywall allowing the excess mud to escape. No need to wipe down the bead if you are applying the fill coat that same day.

**Finishing:** First coat of mud can be applied immediately. Finish mudding, sanding and painting as you normally would. Priming is not required. Always use a high quality paint. For ultimate bond, add Mud-Max to all coats of mud.

**Accessories:** Accessories include Trim-Tex Sanding Blocks & Abrasive Products, Mud-Max Drywall Compound Additive and North by Honeywell -Safety Products distributed by Trim-Tex.

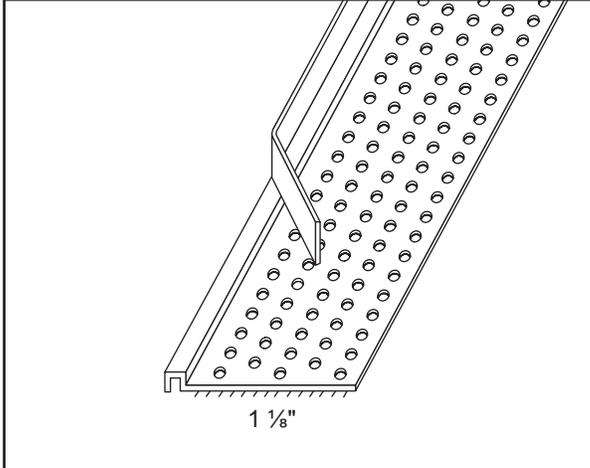

STOCK NUMBER	LENGTH	PCS PER BOX
MS9000XT	10'	40

Job Name \_\_\_\_\_

Contractor \_\_\_\_\_

Date \_\_\_\_\_

Approvals  
(Signatures or Stamps)